

INSTALLING THE FOAM/SPRAY NOZZLE



1.) Gently remove existing bottle/bucket fill nozzle so locking tabs are not damaged.



2.) Make sure the lever is down in bucket fill position at all times when using foam/spray nozzle.



3.) Now make sure to properly align foam/spray nozzle to locking tabs on dispenser before connecting



4.) Rotate to proper icon for foam or spray



5.) Connect to the water supply and activate unit



6.) Disconnect chemical container for water rinse spray only

WARNING:
Attempting to move lever while foam/spray nozzle is attached will damage unit