


WAXIE Delimer

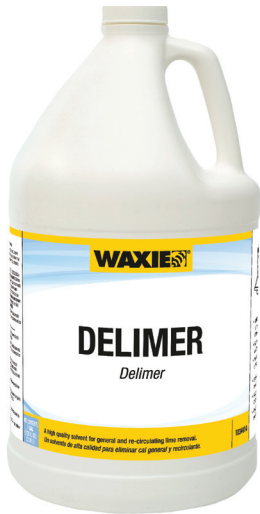

Item: 1034414 gal 4/cs
 Secondary Label: 1034414LBL

APPLICATION



FEATURES & BENEFITS

- Highly concentrated at 1:64 or 2 oz/gal
- Excellent for deliming dish machines & kitchen equipment
- Removes oxidation, corrosion, urine salts, light rust, calcium and iron deposits
- Excellent for water fountain delimiting

DESCRIPTION

WAXIE Delimer is a high quality solvent for general and re-circulating lime removal. Removes oxidation, corrosion, urine salts, light rust, lime, calcium and iron deposits from bathroom surfaces. Excellent for delimiting dish machines and kitchen equipment.

SPECIFICATIONS

	AS SOLD	USE DILUTION
Appearance	Green liquid	Colorless liquid
Odor	Characteristic	Odorless
pH	≥ 0.5-2	< 2
VOC	0.5%	N/A
Melting Point/Freezing Point	< 0°C (32°F)	0°C (32°F)
Initial Boiling Point/Boiling Range	> 100°C (212°F)	100°C (212°F)
Flash Point	N/A	N/A
Flammability	Not determined	Not determined
Relative Density (Density)	≥ 1.099 (1.085-1.105) g/mL	Approx. 1.0
Solubility	Not determined	Not determined

ACTIVE INGREDIENT:

Phosphoric Acid 20-40%

OTHER INGREDIENTS: Balance

SHELF LIFE: All WAXIE brand chemical products have a guaranteed shelf life of up to one year after the date product was manufactured, when stored in ambient conditions. The actual manufacturing date is included in a date code on every product container.

DIRECTIONS FOR USE

Dish Machines: Fill limited tank to 2 to 3 inches below overflow level. Empty 8-16 ounces per gallon into tank and allow machine to run until lime scale disappears.

Steam Tables: Brush or spray WAXIE Delimer full strength on all interior surfaces of steam table. Let stand for 10 minutes. Fill with water, turn on heat and bring to operating temperature. Let stand 10 minutes. Brush or scrape off remaining deposits. Drain and rinse thoroughly with water.

Aluminum Surfaces: Submerge utensils in solution of 1 to 2 ounces of WAXIE Delimer per gallon of hot water. Soak until bright. Rinse thoroughly in water.

Coffee Urns: Fill water jacket of coffee urn with hot water. Add 1 ounce of WAXIE Delimer per gallon of hot water. Heat and let stand from 15 minutes. Drain and rinse thoroughly in water.

WAXIE Delimer

SAFETY INFORMATION

PERSONAL PROTECTIVE EQUIPMENT:

Concentrate D – Safety Glasses, Gloves, Protective Apron & Face Shield



Ready-to-Use D – Safety Glasses, Gloves, Protective Apron & Face Shield



Read the Safety Data Sheet (SDS) and product label before use. The SDS and product label contain hazard warnings, precautionary statements and first aid procedures. SDS documents are available online at www.waxie.com or by calling (800) 995-4466.

For sale to, use and storage by service professionals only. Keep out of reach of children.

HOTLINE NUMBER: You may contact Chem-Tel at (800) 255-3924 for emergency medical treatment information.